


# TOSHIBA

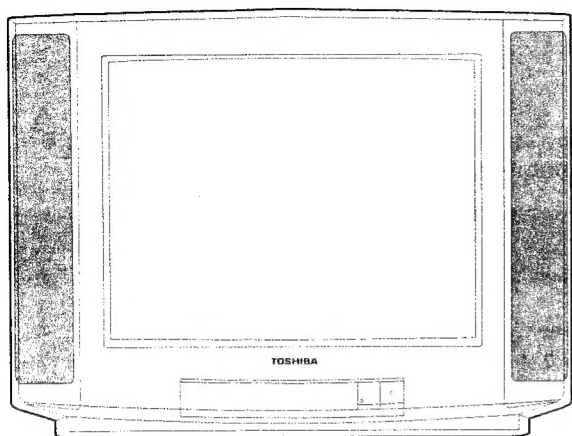


TOSH -02400



Nicam  
Digital Stereo  
Colour Television  
with fastext

## 2173DB

OWNER'S MANUAL

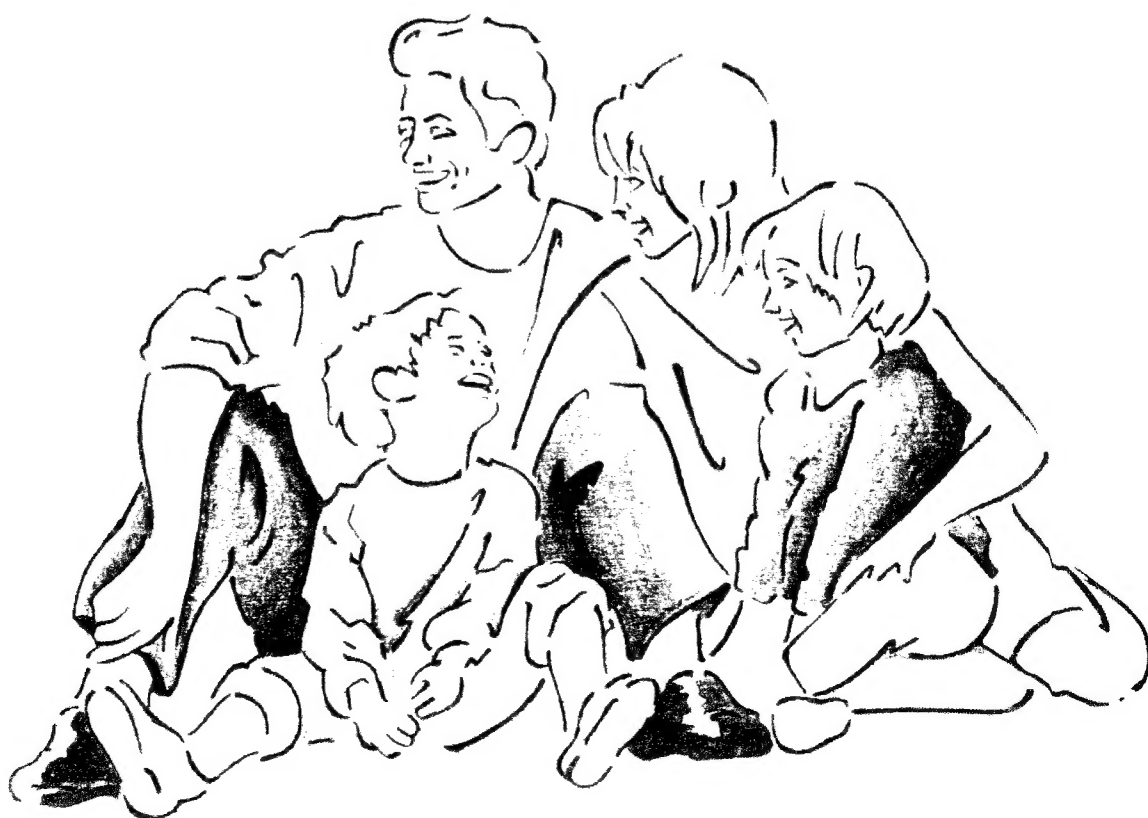

GETTING STARTED

BASIC OPERATION

ADDITIONAL FEATURES

VIEWING TELETEXT

OTHER

# Introduction



This Manual has been designed to be easy to use, but if you need advice in using your Toshiba Television, we have provided a Customer Helpline for you.

## Contents:

### GETTING STARTED

Introduction (Contents, Positioning and Connecting your TV)	Page	2
Installation (A brief Explanation, Connecting your TV)	Page	3
Your remote control (Operation and batteries)	Page	4
How it works (Selecting and adjusting Menu functions)	Page	5
Menu displays (List of menu displays)	Page	6
Auto tune (Switching on)	Page	7
Auto tune	Page	8
Manual tune	Page	9
Manual tune (Tuning your Video Recorder, Manual fine tuning, Programme skip)	Page	10

### BASIC OPERATION

Watching TV (Volume settings, Changing programme positions, Adjusting the Picture and Sound)	Page	11
----------------------------------------------------------------------------------------------	------	----

### ADDITIONAL FEATURES

Stereo or bilingual broadcasts (Stereo/bilingual modes)	Page	12
External AV input, Horizontal shift, Time display	Page	13
Timer, Teletext	Page	14

### VIEWING TELETEXT

Teletext (Using Teletext)	Page	15
The Teletext buttons on the remote control (Teletext)	Page	16

### OTHER

TV Front (Front Connections, Front Controls)	Page	17
TV Back (Back Connections, Automatic Input Selection)	Page	18
For your guidance (Simple problem solving, Safety advice)	Page	19
Specifications & Accessories	Rear cover	

## Positioning and Connecting your TV:

Optimum reception of colour and text requires a good signal and will generally mean that a loft or outdoor aerial must be used. The exact type and siting will depend upon your particular area; your local Toshiba dealer will be best to advise.

**Positioning your TV** – Locate the television where direct sunlight does not impair the picture, soft and indirect lighting is recommended for comfortable viewing.

Avoid locations which are excessively warm, moist or humid to prevent damage to the cabinet and components. Leave at least 10 cm clearance around the top, back and sides of the television to allow adequate ventilation and sound response.

**Mains Connection** – The mains supply required for this equipment is 220-240v AC 50Hz. Never connect to a DC supply or any other power source.

**Mains Plug** – **DO NOT** cut off the fused mains plug from this equipment, this incorporates a special Radio Interference Filter, the removal of which will impair its performance.

The fuse fitted in this plug is 5A. and is approved by ASTA or BSI to BS1362. It should only be replaced by a correctly rated and approved type and the fuse cover must be re-fitted.

**IF IN DOUBT CONSULT A COMPETENT ELECTRICIAN**

## 99 GETTING STARTED

# Installation

## Terms used in this Manual

Programme position: Memory location on the TV and Remote control where the TV station is stored.  
 Channel: A number between 21 and 69 representing the broadcast frequency of a TV Station.  
 Station: The Identifying name given to the Broadcast programme e.g. BBC1.

## A brief Explanation:

Channel 69	
54	BBC1
42	ITV
37	Ch5
32	Ch4
28	BBC2
25	ITV
23	BBC1
Channel 21	

Your new Toshiba television is designed to automatically tune-in and store all available terrestrial transmissions and a position for a satellite receiver. When using 'Auto tune', the TV will search through the entire broadcast band. For example:

When a BBC1 signal is found the TV will automatically suggest that it should be stored on programme position 1. Where more than one-BBC1 is found, you will be offered the choice of which BBC1 signal you want to put on programme position 1.

The same will happen for BBC2, ITV and Channel 4. The TV will also leave programme position 5 for Channel 5, even though you may not be able to receive the signals yet. Programme position 6 is reserved for a Satellite receiver.

Any unstored signals will be assigned to programme position 7 and above.


## Connecting your TV:

### Connecting up

Connect the aerial plug to the socket on the rear of the television. If you use a satellite receiver and/or a video recorder it is essential that the aerial cable is connected through the satellite receiver and/or through the video recorder to the television.

**DO NOT CONNECT SCART LEADS UNTIL THE TELEVISION IS FULLY TUNED.**



The following simple steps will enable you to automatically tune your TV and store BBC1 on position 1, BBC2 on position 2, ITV on position 3, Channel 4 on position 4, Channel 5 on position 5 and Satellite programmes on position 6.

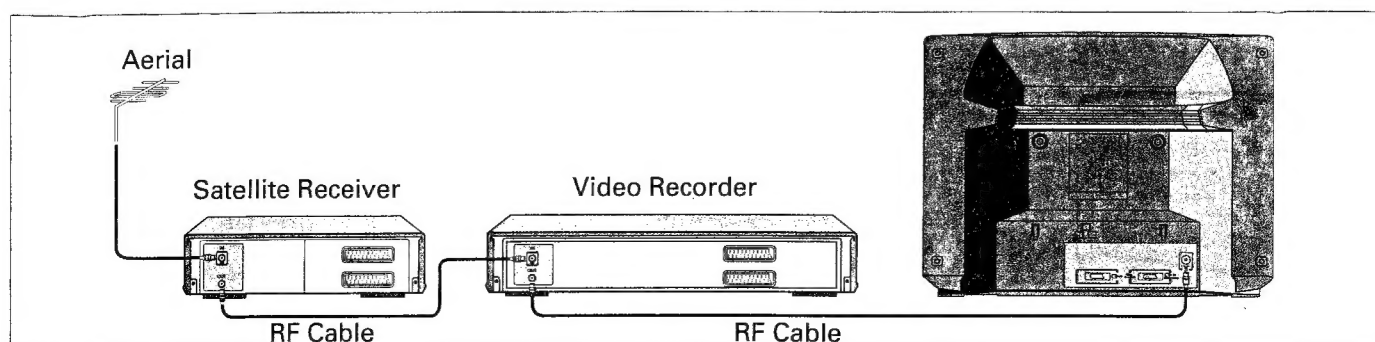

# Your remote control

The illustration below is intended to give an overall outline of the remote control. Individual buttons are described in the text.

## Operation and batteries:

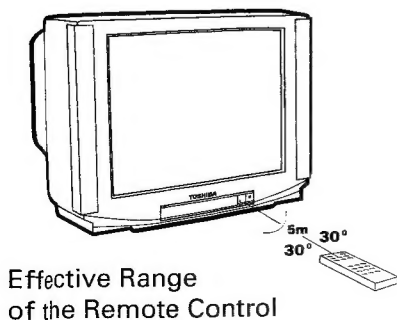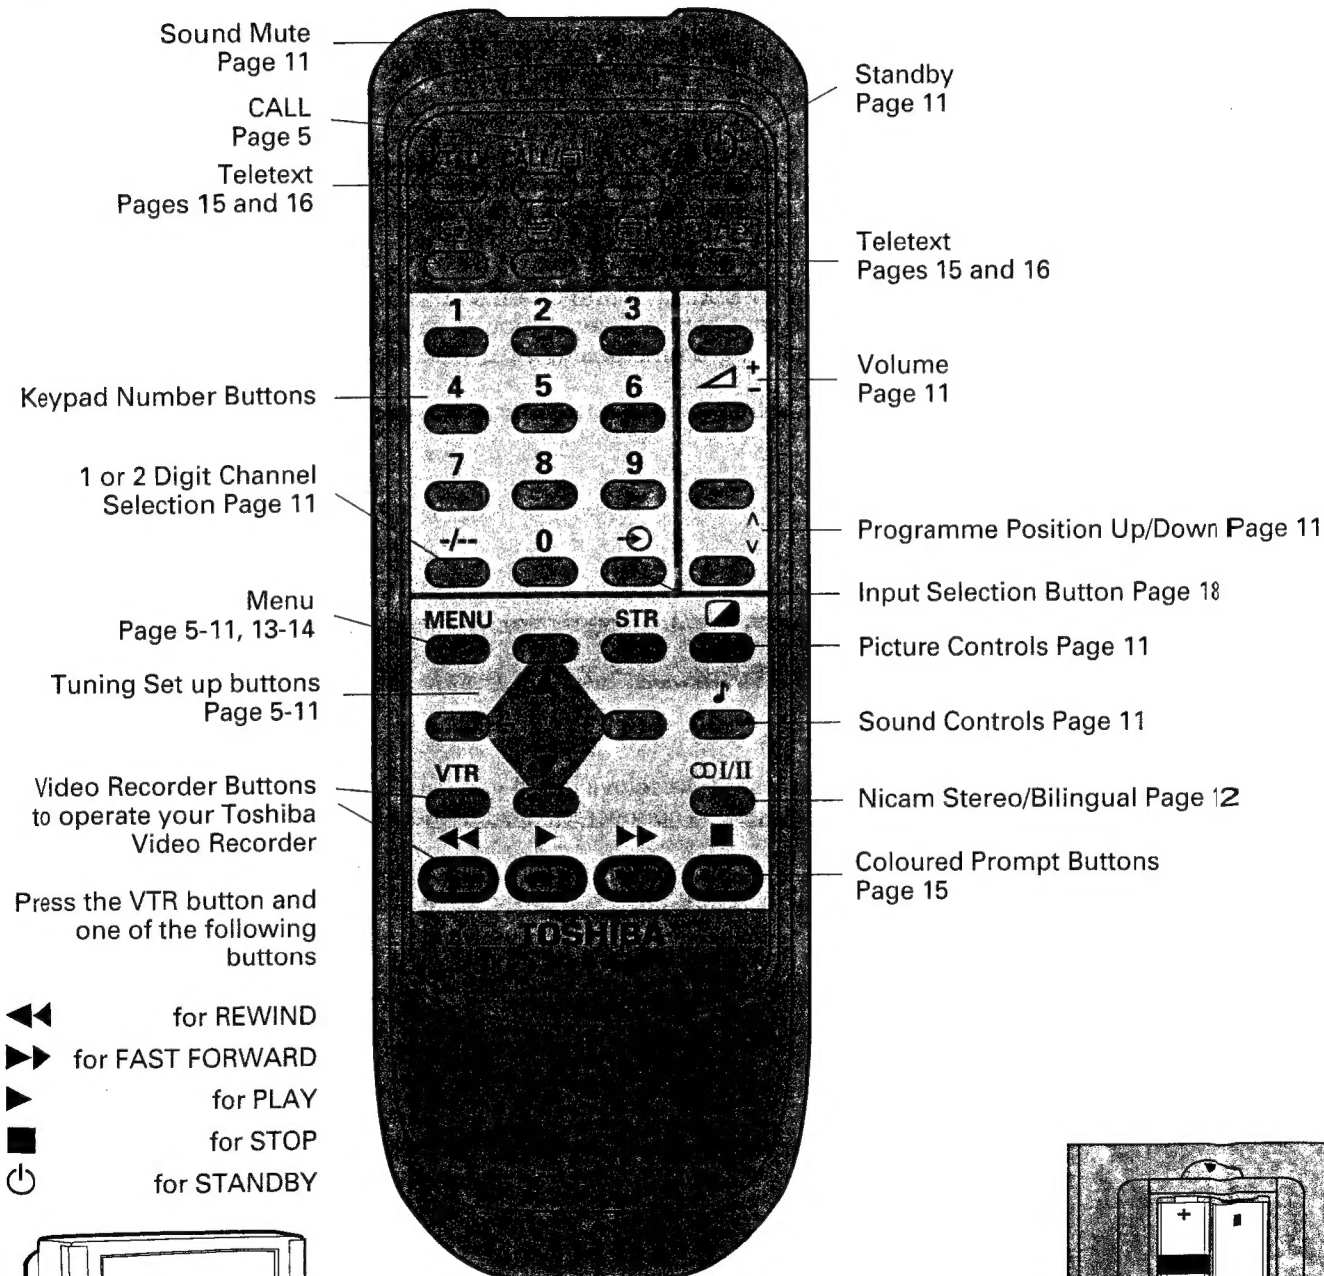

When fitting new batteries take care to observe the correct polarities.

All Toshiba batteries are Cadmium and Mercury free.


Suitable battery types are: R6 or AA.

### Caution:

**DO NOT** throw your batteries into a fire. Dispose of your batteries in a designated disposal area.

**DO NOT** combine a used old battery with a new one.

**DO NOT** mix battery types.

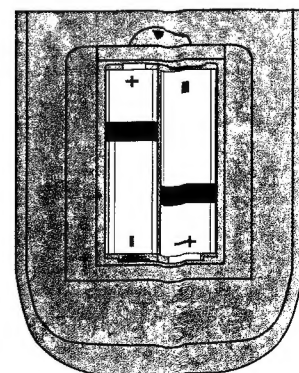


# How it works

Your new Toshiba TV has a menu system to help you select the various functions. Press the **MENU** button on the remote control unit to access the **Main menu**.

## Selecting and adjusting Menu functions using the remote control:

The buttons you will need for each section are highlighted in white (see below).

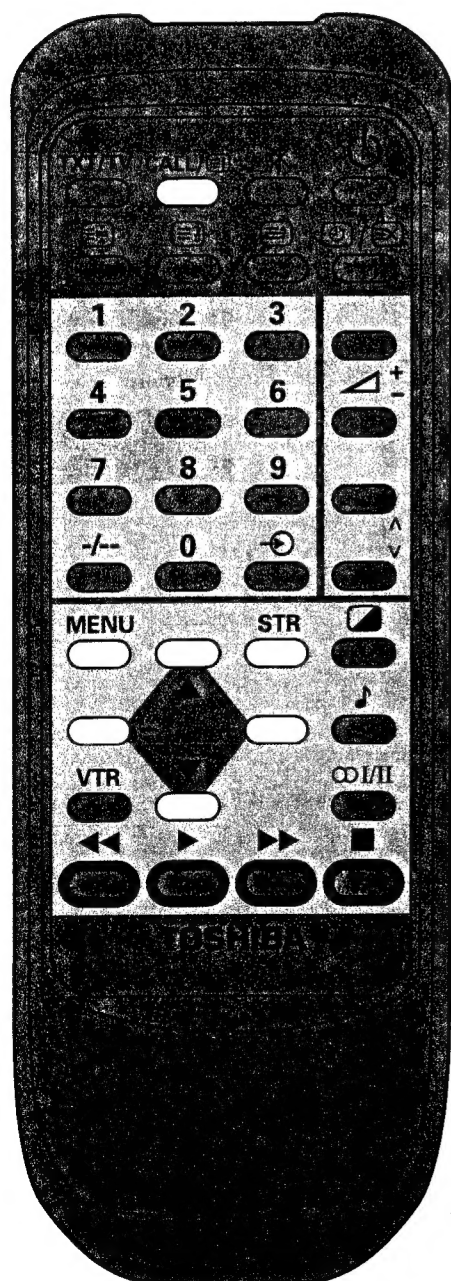

If the Power-On light is unlit, press the on/off switch on the front of the TV to switch the set into standby mode.


The Power-On red light will glow.

Press button 1 on the remote control to turn the TV on.

**Highlighting** a feature, enables you to **adjust/alter** it. To **highlight** a feature press the **▲** button to **move** the bar up, or the **▼** button to **move** the bar down. To **select/adjust** a feature press either the **+** (or **-**) button.



### Selecting and adjusting Menu functions

- 1 Press the **MENU** button to access the **Main menu**.
- 2 Use the **▲** (or **▼**) button to **move** the highlight bar up (or down) the menu.
- 3 Use the **+** (or **-**) button to **select** or **adjust** the settings.

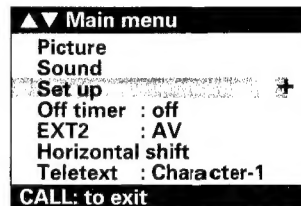

For example: To **select** Balance in the Sound menu.

- 1 Press the **MENU** button to access the **Main menu**.
- 2 Use the **▲** (or **▼**) button to **highlight** Sound.
- 3 Press the **+** button to **select** the **Sound** menu.

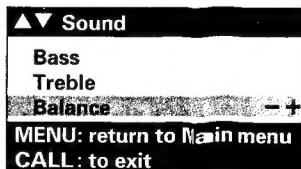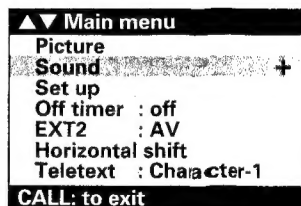

- 4 Press the **+** button to **select** the **Balance** display.



Press the **+** (or **-**) button to **adjust** the setting.

Menu displays will remain on screen for approximately 15 seconds.

If a display disappears simply press the **MENU** button to bring back the **Main menu** screen.

















To cancel any display press the **CALL** button.

# Menu displays

  Menu displays will remain on screen for approximately 15 seconds. If a display disappears simply press the **MENU** button to bring back the **Main menu** screen.

To cancel any display press the **CALL** button.

## List of menu displays:

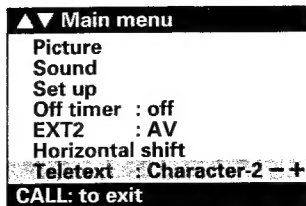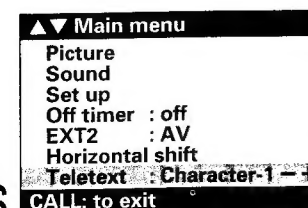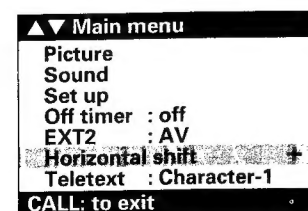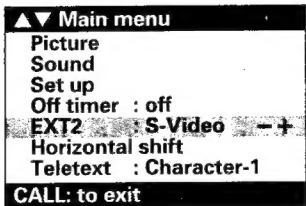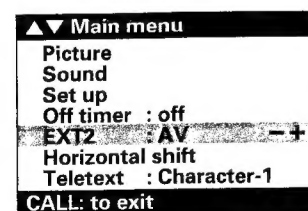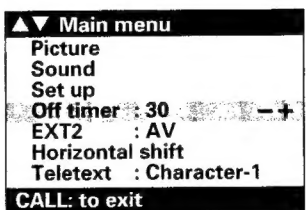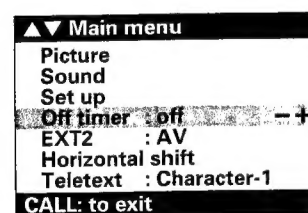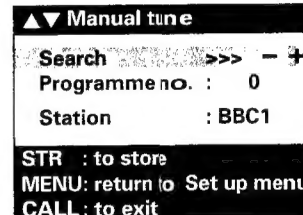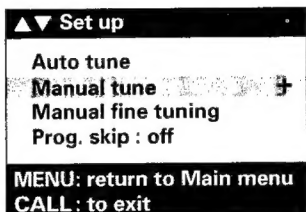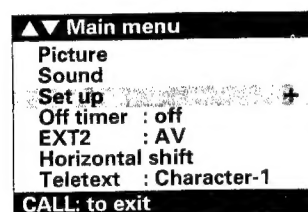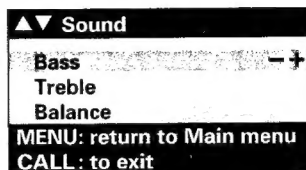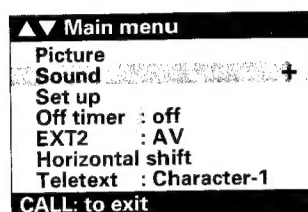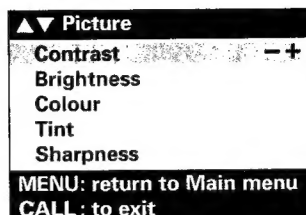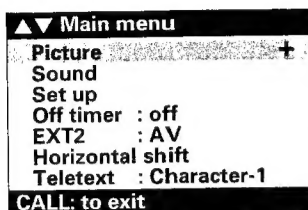



Character-1		
English	Français	Deutsch
Italiano	Español	Jazyk
Svenska	Português	
Character-2		
Po polsku	Romana	Jazyk
Srpski	Français	Deutsch
Italiano	Svenska	



# Auto tune

Due to the complicated map of TV transmitters we are unable to pre-tune all programme positions. The following simple steps will take you through the process, enabling you to allocate any TV station to any programme position.

## Switching on:

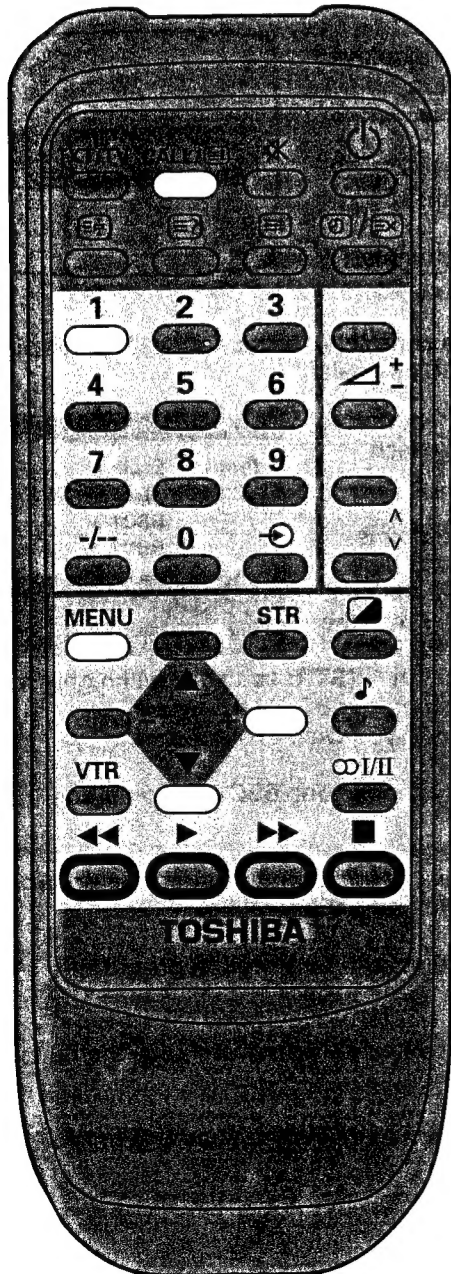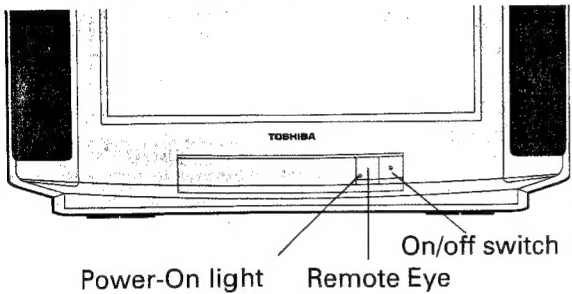

Menu displays will remain on screen for approximately 15 seconds. If a display disappears simply press the **MENU** button to bring back the **Main menu** screen.


To cancel any display press the **CALL** button.

**Note:** The satellite receiver must be switched on and tuned to Sky News and the video recorder plugged in and set to standby. This will enable your television to identify and allocate the necessary programme positions.


- 1 If the Power-On light is unlit, press the on/off switch on the front of the TV to switch the set into standby mode.

The Power-On red light will glow.


- 2 Press button 1 on the remote control to turn the TV on.

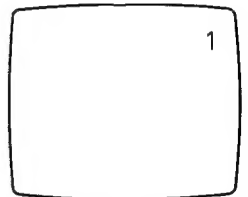


- 3 Press the **MENU** button to **select** the **Main menu**.

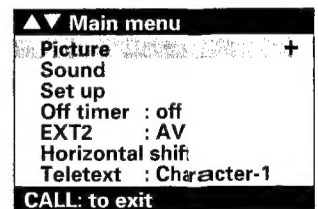

- 4 Press the **▼** button repeatedly to **highlight** Set up.

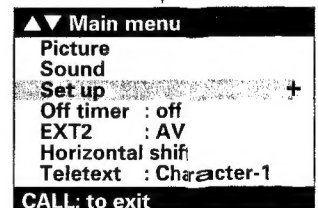

- 5 Press the **+** button to **select** the **Set up** menu.

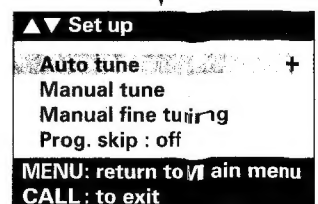

Continued on page 8.


# Auto tune (continued)

Auto tune searches and automatically allocates programme positions, any unassigned programme positions will be skipped. To allocate a position for your video recorder use Manual tune on page 10.

## Auto tune:

Menu displays will remain on screen for approximately 15 seconds.

If a display disappears simply press the **MENU** button to bring it back.

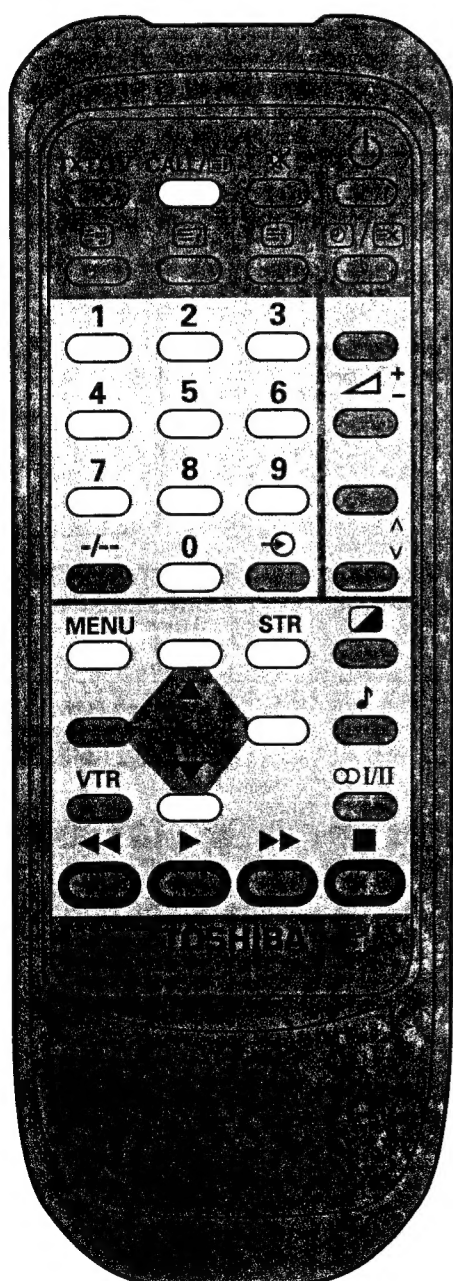

**6** Press the **+** button to **select** the **Auto tune** display.

Press the **STR** button to start the automatic search.

DO NOT PRESS ANY BUTTONS WHILST THE AUTOMATIC SEARCH IS IN PROGRESS. If you make a mistake simply repeat steps 3 and 4 to start again from the beginning.

Each station will be displayed along with the station identifier, if available.

Allow the television to complete the search.

(This takes approximately 1½ minutes.)

When the search is complete, the screen will first display all the available BBC1 signals.

**7** Press the **▼** (or **▲**) button to **highlight** and view each signal in turn.

**8** If more than one station is displayed, choose the strongest signal (i.e. the best picture and sound). Press the **STR** button to STORE BBC1 to programme position 1. (**STR: to store** will highlight momentarily. Any unstored BBC1 choices will be displayed later should you wish to store them.

**Note:** You can only choose one BBC1 station at this stage.

Repeat step 7 for all the remaining programme positions you wish to tune including the satellite.

Any remaining stations can be stored in programme positions 7, 8, 9 etc.

When you have accepted all 'found' stations, the Set up menu re-appears.

Press the **CALL** button to exit when you have finished.

**Auto tune**  
PREVIOUS SETTINGS  
WILL BE LOST!  
EXIT FOR NO CHANGE  
**STR: START**  
MENU: return to Set up menu  
CALL: to exit

**SEARCHING**  
Station : BBC1

**▲▼ Auto tune**

Prog.	Station
1	BBC1
	BBC1
	BBC1

**STR** : to store  
MENU: return to Set up menu  
CALL: to exit



# Manual tune

Your Toshiba television may be tuned manually as an alternative to AUTO TUNE. See page 10 for allocating a programme position for your video recorder.

## Manual tune:

Menu displays will remain on screen for approximately 15 seconds.



- 1 Press the **MENU** button to **select** the **Main menu**.  
Press the **▲** (or **▼**) button repeatedly to **highlight** Set up.

▲▼ Main menu	
Picture	
Sound	
Set up	+
Off timer	: off
EXT2	: AV
Horizontal shift	
Teletext	: Character-1
CALL: to exit	

- 2 Press the **+** button to **select** the **Set up** menu.

▲▼ Set up	
Auto tune	
Manual tune	+
Manual fine tuning	
Prog. skip	: off
MENU: return to Main menu	
CALL: to exit	

- 3 Press the **+** button to **select** the **Manual tune** menu.

- 4 Press the **▲** (or **▼**) button to **highlight** Search.

Press the **+** button to search up or the **-** button to search down the band. The >>> will flash while the TV is searching.

▲▼ Manual tune	
Search	- +
Programme no.	: 0
Station	: ----
STR : to store	
MENU: return to Set up menu	
CALL: to exit	

When a station/satellite is found it will be displayed along with the station identifier (when there is one, i.e. BBC1).

If you do not wish to store the station press the **+** (or **-**) button to continue the search.

▲▼ Manual tune	
Search	>>> - +
Programme no.	: 0
Station	: BBC1
STR : to store	
MENU: return to Set up menu	
CALL: to exit	

- 5 If you wish to store the station press the **▼** (or **▲**) button to **highlight** the Programme no.

Press the **+** (or **-**) button to **select** your chosen programme position number.

▲▼ Manual tune	
Search	
Programme no.	: 1 - +
Station	: BBC1
STR : to store	
MENU: return to Set up menu	
CALL: to exit	

- 6 Press the **STR** button to store the broadcast. **STR : to store** will highlight momentarily.

The search will stop when the set reaches the top of the band, the word SEARCH will flash until you press the **+** (or **-**) button to continue the search or **CALL** to exit.


The display will stay on screen for approx. 20 seconds. If you do not **STORE** the programme position it will not be held in memory.

Repeat the procedure for all the remaining programme positions you wish to tune including the satellite. Press the **CALL** button to exit when you have finished.

# Manual tune (continued)

If you cannot connect your TV to the video recorder using scart leads you will need to allocate a programme position on the TV to the video recorder.

**Tuning to your video recorder (connected via an RF lead), Manual fine tuning, Programme skip:**

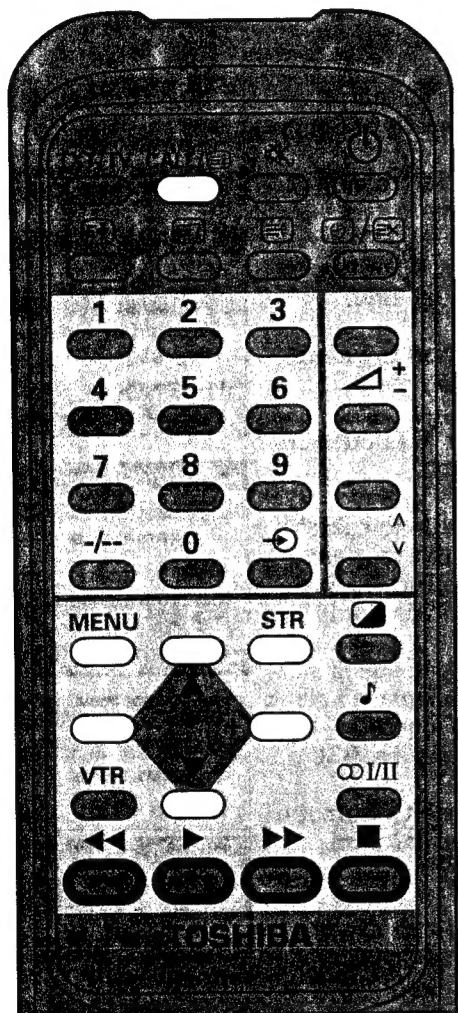

## Programme skip:

The Programme skip feature enables you to prevent certain programme positions from being viewed.

For example, if you are going out for the evening and you do not wish your children to watch a certain film etc., you can skip the programme position (channel, e.g. BBC1) and take the remote control with you. The TV will function normally, using the controls on the front of the TV but the set will not show the skipped programme position (in our example BBC1).

## Tuning to your video recorder (connected via an RF lead)

To tune your television to your video recorder disconnect the scart leads and play a pre-recorded tape.

- 1 Follow steps 1 to 6 (Manual tune) as detailed on page 9.

When the signal from your video recorder is found, your pre-recorded tape will be displayed.

It is suggested that it is stored in position 0.

Don't forget to press STR.

**YOU MAY NOW CONNECT YOUR SCART LEADS**

### ▲▼ Manual tune

Search : - +  
Programme no. : 7  
Station : ----

STR : to store  
MENU: return to Set up menu  
CALL : to exit

### ▲▼ Manual tune

Search : - +  
Programme no. : 0 - +  
Station : ----

STR : to store  
MENU: return to Set up menu  
CALL : to exit

## Manual fine tuning (Not normally required)

This will enable you to adjust the tuning manually to optimise the picture.

- 1 Press the **MENU** button to display the **Main menu**. Press the **▲** (or **▼**) button to **highlight** Set up. Press the **+** button to **select** the **Set up** menu.

### ▲▼ Set up

Auto tune  
Manual tune  
Manual fine tuning : - +  
Prog. skip : off

MENU: return to Main menu  
CALL : to exit

- 2 Press the **▲** (or **▼**) button to **highlight** Manual fine tuning.

Hold down the **+** (or **-**) button to fine tune up (or down).

This setting will be stored automatically.

**Tuning-in is now complete.**

## To select Programme skip

- 1 Select the programme position to be skipped, i.e. Position 1, BBC1. With the adjacent display showing, press the **▲** (or **▼**) button to **highlight** Prog. skip.

### ▲▼ Set up

Auto tune  
Manual tune  
Manual fine tuning  
Prog. skip : off : - +

MENU: return to Main menu  
CALL : to exit

- 2 To turn the Prog. skip option on or off use the **+** (or **-**) button.


NOTE: A \* will appear on the screen beside a skipped programme position when using the numbered buttons on the remote control.


 
# 99 BASIC OPERATION

## Watching TV


 
NOTE: To identify the current programme position press the **CALL** button. Press again to cancel the display.


### Volume settings, Changing programme positions, Adjusting the Picture and Sound:

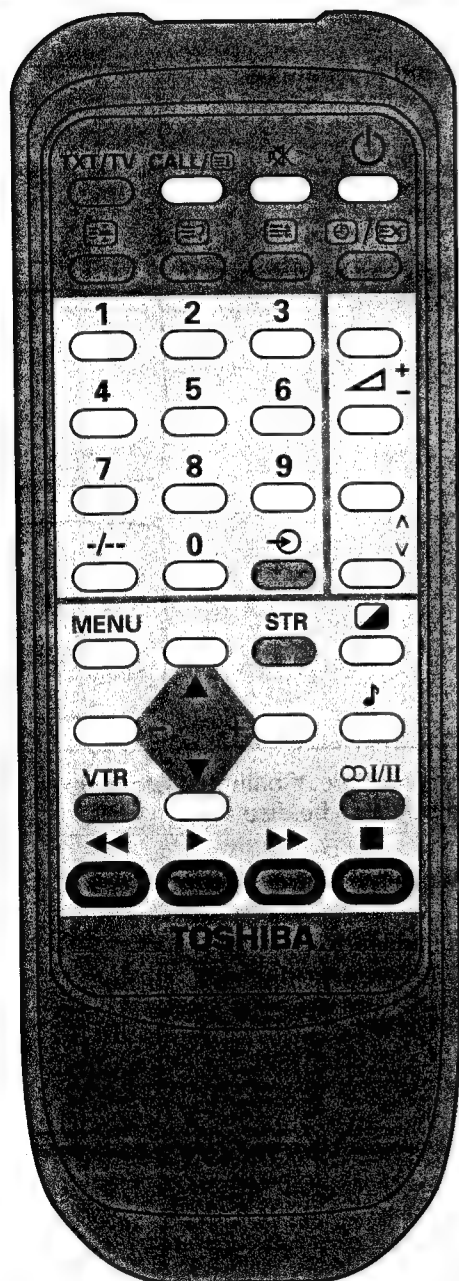

**Standby Button**   
This allows you to put the set into standby mode when leaving the TV unattended for short periods of time. To return to TV mode press the  button, or any of the numbered buttons on the remote control.

#### To alter the volume

 - 1 To raise or lower the volume press the  (or ) buttons. The display will show the changes.





Alternatively:

- 2 The sound can be muted simply by pressing the  button. **SOUND MUTE** appears on the screen. Press again to restore the sound.



#### To change programme position

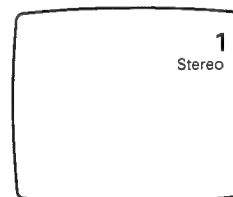- 1 To select a programme position press one of the numbered buttons. The programme position will be displayed in the top right corner of the screen for a few seconds.




 
If you have stored more than 10 programme positions, press the  button to select --.


Alternatively:

- 2 You can change the programme position by using the  (or ) button.

#### Picture and Sound Adjustment

- 1 Press the  button to **select** the **Picture** display, or press the  button to **select** the **Sound** menu.



Press the  (or ) button repeatedly to **highlight** the desired feature, e.g. Contrast.

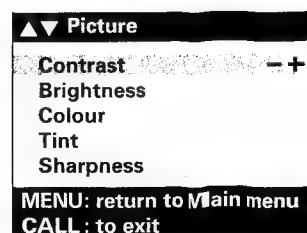

Note: The tint adjustment only applies to tapes that have been recorded and played back on an NTSC video recorder.

 - 2 Press the  button to **select** the **Contrast** display.



Use the  (or ) button to **adjust** the setting.

# Stereo or bilingual broadcasts

This TV set is designed to receive and automatically detect all Nicam and dual transmissions. The following describes the operation and displays which accompany these broadcasts.

## Stereo/bilingual modes:

If stereo or dual broadcasts are transmitted the word Stereo or Dual will appear in the upper right corner of the screen, after a few seconds the display will disappear. The display will reappear each time you change programme positions, provided that the broadcast is in stereo. If the broadcast is not in stereo the word Mono will appear.

Some common problems with stereo reception:

The word Stereo does not appear on screen:

- 1 It is not a stereo transmission.
- 2 Your local transmitter has not been upgraded for stereo.

Stereo appears but sound is in Mono:

- 1 You have selected Mono mode.
- 2 The original soundtrack of the film etc. was recorded in Mono.
- 3 The programme is being broadcast with identical sound in left and right channels.

**Note:** For stereo and dual information refer to a TV programme magazine or the text pages for your area.

If transmission is in Mono the  $\infty$ I/II button has no function.





### To select stereo/mono mode

- 1 Select the required programme position.

Press the  $\infty$ I/II button repeatedly, to select between Stereo and Mono.



(Nicam broadcasts can be in either Stereo or Mono.)

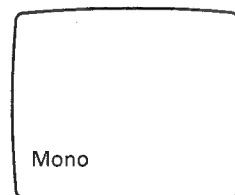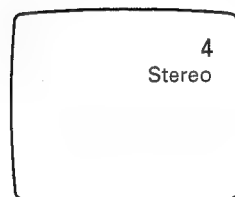

Bilingual transmissions are rare. If bilingual broadcasts are transmitted the word Dual will be displayed.


### To select bilingual mode (when transmitted)

- 1 If the word Dual appears when you select your programme position, press the  $\infty$ I/II button to select between the different options.

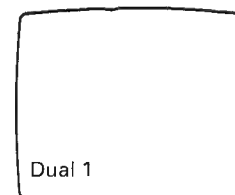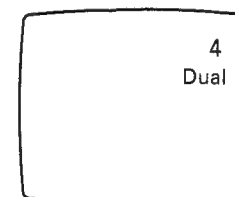

# External AV input, Horizontal shift, Time Display

## External AV input Scart 2 (EXT2):

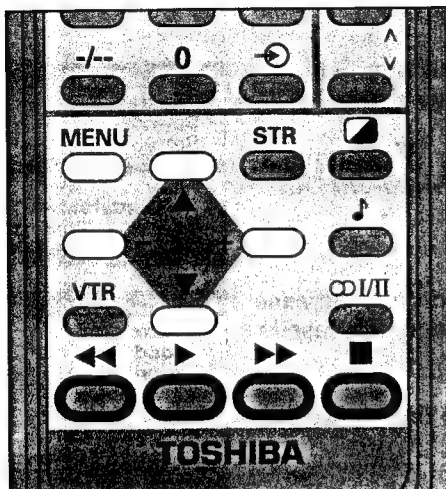

### External AV input Scart 2 (EXT2)


This enables the selection of the type of video recorder to be connected to the number 2 scart socket. The [S] sets up the television for S-Video, the AV sets the television for standard video recorders.

- 1 Press the **MENU** button to display the **Main menu**.  
Press the **▲** (or **▼**) button to **highlight** EXT2.
- 2 Press the **+** (or **-**) button to **select** the required input signal for Scart 2 (EXT2).

▲▼ Main menu	
Picture	
Sound	
Set up	
Off timer : off	
EXT2 : AV	- +
Horizontal shift	
Teletext : Character-1	
CALL: to exit	

## Horizontal shift:

This is factory set and should need little or no adjustment, however, if when viewing the display is to one side, adjustment to a central position can be made.

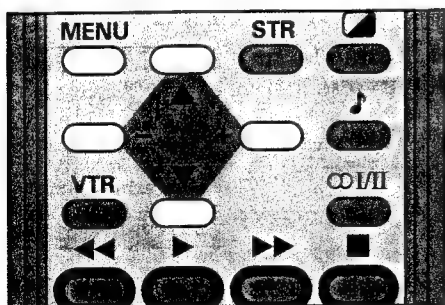

### Horizontal shift


- 1 Press the **MENU** button to display the **Main menu**.  
Press the **▲** (or **▼**) button to **highlight** Horizontal shift.  
Press the **+** button to **select** Horizontal shift.
- 2 Press the **+** (or **-**) button to **adjust**.

▲▼ Main menu	
Picture	
Sound	
Set up	
Off timer : off	
EXT2 : AV	
Horizontal shift	- +
Teletext : Character-1	
CALL: to exit	

Horizontal shift




## Time Display:

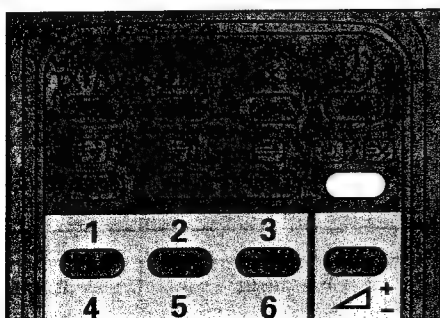

### To select the Time Display

- 1 If you press the **⌚** button whilst watching a normal TV broadcast, you will see a very accurate time display appear in the top right corner of the screen. i.e. 6.25 and 52 seconds p.m., which will disappear after a few seconds.

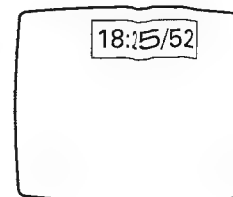




# Timer, Teletext

## Timer:

The Timer is useful if you want the television to turn itself off into Standby after a selected period of time. For example: If you want the set to turn itself to Standby in 30 minutes time simply follow the procedure in steps 1 and 2.

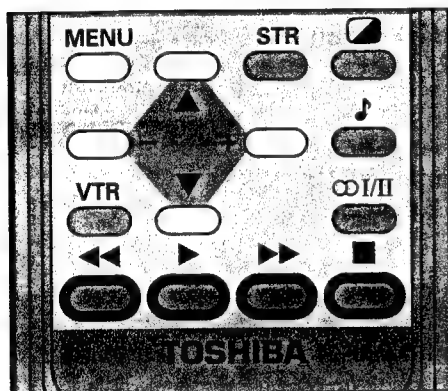

### To select the Off timer

- 1 Press the **MENU** button to display the **Main menu**.  
Press the **▲** (or **▼**) button repeatedly to **highlight** Off timer.


▲▼ Main menu  
Picture  
Sound  
Set up  
Off timer : off - +  
EXT2 : AV  
Horizontal shift  
Teletext : Character-1  
CALL: to exit

- 2 Press the **+** button to increase or the **-** button to decrease in 5 minute steps.

The maximum time delay is 120 minutes.

▲▼ Main menu  
Picture  
Sound  
Set up  
Off timer : 30 - +  
EXT2 : AV  
Horizontal shift  
Teletext : Character-1  
CALL: to exit

## Teletext:

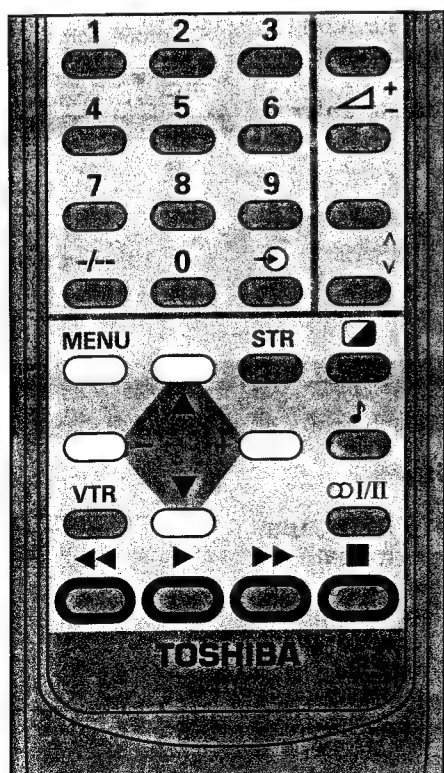

### To select Teletext Character set

- 1 Press the **MENU** button to display the **Main menu**.  
Press the **▲** (or **▼**) button repeatedly to **highlight** Teletext.

▲▼ Main menu  
Picture  
Sound  
Set up  
Off timer : off  
EXT2 : AV  
Horizontal shift  
Teletext : Character-1 - +  
CALL: to exit

- 2 Press the **+** (or **-**) button to **select** between Character-1 and Character-2.

This should be set to Character-1 for normal U.K. Teletext signals.

▲▼ Main menu  
Picture  
Sound  
Set up  
Off timer : off  
EXT2 : AV  
Horizontal shift  
Teletext : Character-2 - +  
CALL: to exit

#### Character-1

English	Français	Deutsch
Italiano	Español	Język
Svenska	Português	

#### Character-2


Po polsku	Romana	Język
Srpski	Français	Deutsch
Italiano	Svenska	



# Teletext

Your new Toshiba TV is capable of displaying Teletext in different ways depending on which system(s) are broadcast by your television broadcast station. Your Toshiba dealer will be able to advise you.

## Using Teletext:

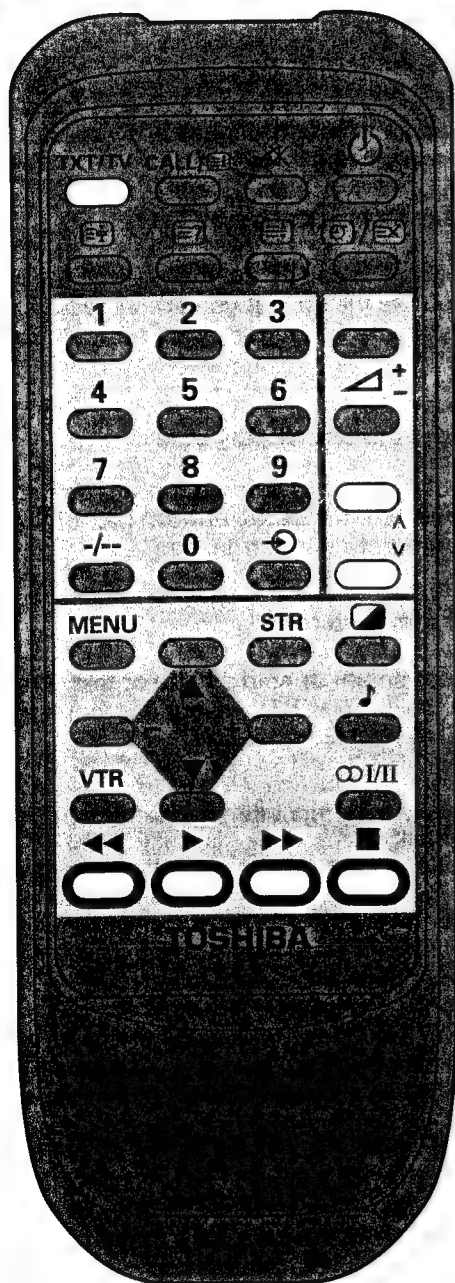

When you first select Teletext you will see an index page which briefly outlines the main subject areas and their relevant page numbers. You can access any text page by entering a 3 digit page number using the numbered buttons on the remote control.

To advance to the next page of text, press the **▲** button, to go back to the previous page press the **▼** button.

**FASTTEXT** is a method of viewing text pages by related subjects. These subject areas are grouped by the broadcast studio and are selected by pressing one of the associated coloured prompt buttons on the remote control.

### Using FASTTEXT

Press the **TXT/TV** button to **select** Teletext.

To access any given subject shown in colour at the bottom of the screen simply press the relevant coloured button on the remote control.


**Note:** It will not be possible to change programme position or use any of the other functions whilst in Teletext mode, you will have to cancel the teletext first by pressing the **TXT/TV** button.

# The Teletext buttons on the remote control

Below is an introduction to the teletext buttons on your remote control and their functions.

## Teletext:

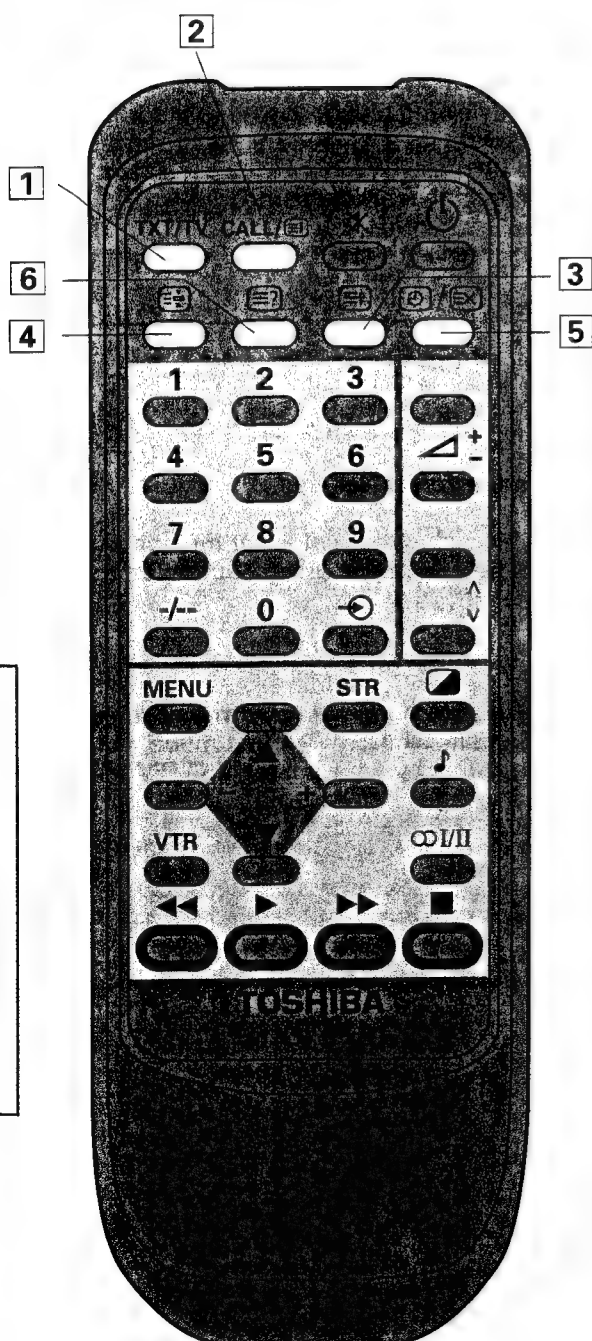

**Note:** It will not be possible to change programme position or use any of the other functions whilst in teletext mode, you will have to cancel the teletext first by pressing the **TXT/TV** button.




### 1 **TXT/TV** To display a page of teletext:

Press the **TXT/TV** button to display the initial page. Press again to superimpose the text over a normal broadcast picture. Press again to return to normal TV mode.


### 2 To display an index page:

Press the  button to call up the index page for the subject area you are viewing. If you are viewing a section index, by pressing the  button again you will see the general index.



### 3 To enlarge the text display size:

Press the  button once to enlarge the top half of the page, press again to enlarge the bottom half of the page. Press again to revert to the normal size.



 
 
### 4 To hold a wanted page:

At times it is convenient to hold a page of text. Press the  button and the word **HOLD** will appear in the top left of the screen. Press again to release.


### 5 / To select a page whilst viewing a normal picture:

If, whilst in teletext mode, the  /  button is pressed, a normal picture will be displayed. A page selection can be entered and the TV will indicate its presence by displaying a box with the selected page number. Press the **TXT/TV** button to view the page.

#### To display news flashes:

To view news flashes as they are broadcast, select the news flash page for the particular teletext service (see the index page of Teletext service). Press the  /  button. The news flashes will be displayed as and when they are broadcast. Press the  /  button to cancel the display. Note: It will not be possible to change programme position whilst in this mode, you will have to press the **TXT/TV** button to cancel the teletext first.


### 6 To reveal concealed text:

Some pages cover topics such as quizzes and jokes. To discover the solutions press the  button.

# TV Front

For your convenience you can make connection of camcorders, computer games etc. much more easily. These are accessible through the sockets located behind the flap on the front of the TV set. To open, simply press the centre of the panel.

## Front connections:

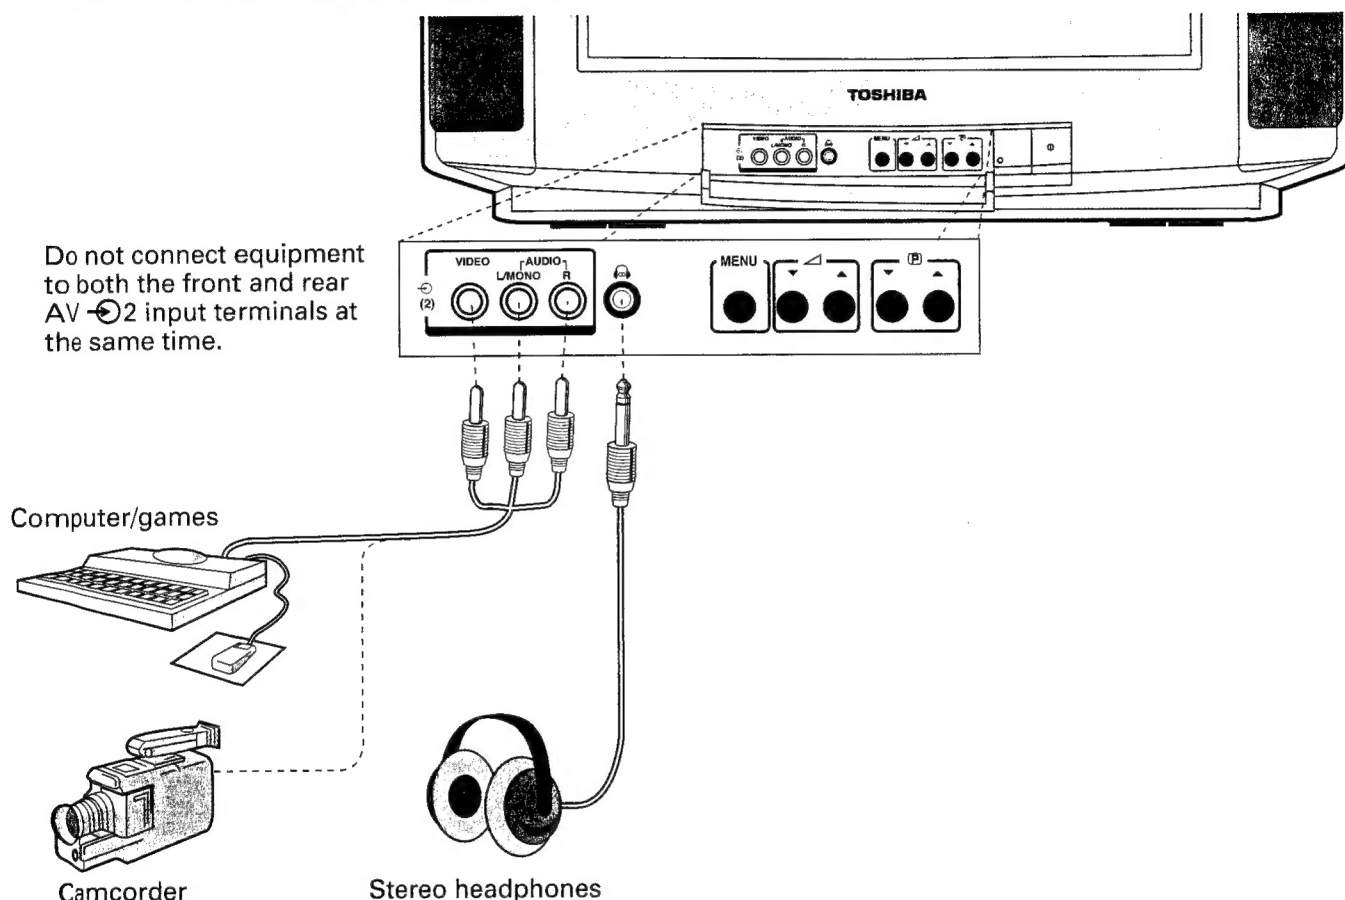


## Front Controls:

Whilst all the necessary adjustments and controls for your new TV are made using the remote control, the buttons on the front of the TV may be used.


**Note:** The set must be fully tuned-in to enable you to use these buttons.

 - 1 To alter the volume press the + (or -) button.



- 2 To alter the programme position press the (or ) button.

- 1 Press the **MENU** button to bring up the **Main menu**.
- 2 Press the (or ) button to **highlight** the required item.
- 3 Press the **+** (or **-**) button to **select/adjust** the selected function.

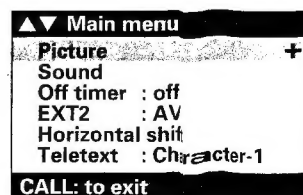


Allow displays to disappear or press the **MENU** button on the front of the TV.

# TV Back


You may now connect any auxiliary equipment using SCART leads for optimum performance. The diagram below illustrates some of the possible connections for auxiliary equipment.


## Back Connections:

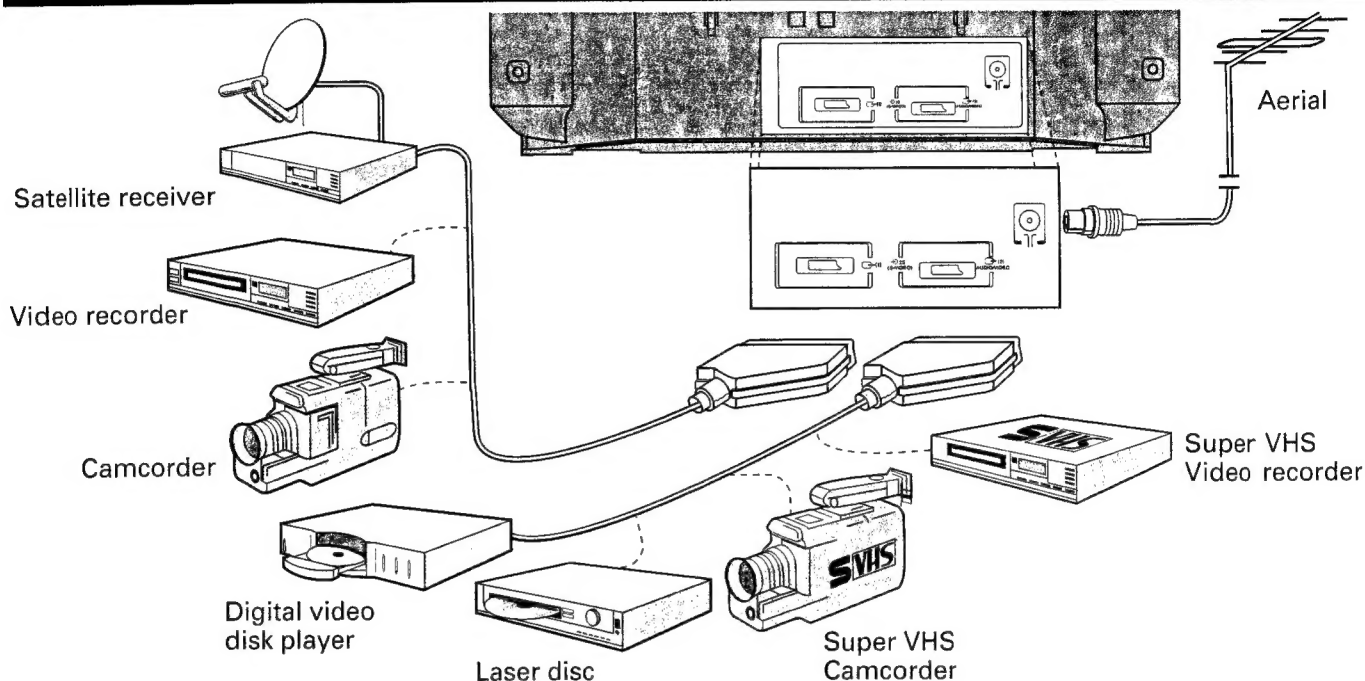
 
 



## Automatic Input Selection:

If your TV automatically switches over to monitor the auxiliary equipment, you can press one of the numbered buttons on the remote control to return to TV mode.

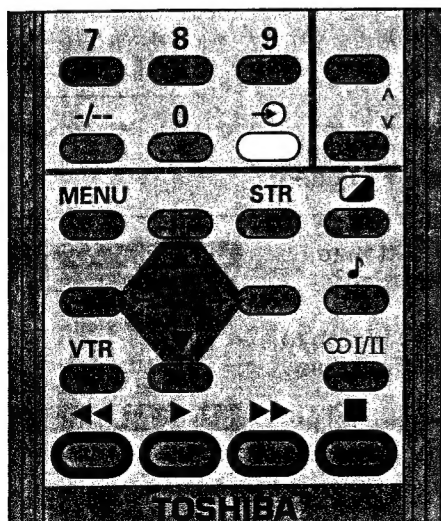

Having connected your video recorder, satellite receiver etc. you may have to use the external source selection button  to see the picture.

- 1 If the TV does not switch over automatically, press the  button to bring up the adjacent display. This will set your TV to view a video recorder connected through Scart 1 (EXT1).
- 2 Press the  button again to view a second video recorder, laser disc player, Camcorder, computer/game or satellite receiver through Scart 2, input 2 front connections (EXT2 or EXT2s).
- 3 Press the  button again to return to TV mode. Alternatively simply press one of the numbered buttons at any time.

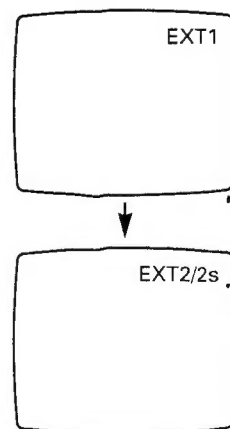

Note: The input selection display will be EXT2s if S-Video input has been selected (see page 13).


# For your guidance

If your TV fails to operate correctly, we recommend that the following simple checks are carried out before contacting your local Toshiba dealer.

## Simple problem solving:

### No Picture or Sound.

Check:

- mains switches are on, press . Plug into a known working mains socket.
- 'Timer off' facility has operated.

### Poor or no Picture.

Try a different TV station, check your aerial and connections. Adjust fine tuning.

### Good picture but no sound.

Press  + or .

### Remote Control does not work.

Check the batteries.

### If you have problems with teletext.

Go to the main index page of the teletext service and look for the User Guide. This will explain the basic operation of teletext in some detail.

### Coloured patches on screen.

Caused by magnetic field interference, turn off TV for 10 minutes, turn on again.

### VTR or Satellite picture in Black and White.

Ensure the correct input socket is being used and that the socket is not switched to S-Video.

## Safety advice:

SOME DO'S AND DON'TS ON THE SAFE USE OF EQUIPMENT. PLEASE READ THE FOLLOWING POINTS CAREFULLY. THEY ARE OF A GENERAL NATURE, INTENDED TO HELP YOU WITH ALL YOUR ELECTRONIC CONSUMER PRODUCTS. SOME ITEMS MAY NOT APPLY TO THE GOODS YOU HAVE JUST PURCHASED.

This equipment has been designed and manufactured to meet international safety standards, but like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

**DO** read the operating instructions before you attempt to use the equipment.

**DO** ensure that all electrical connections, including the mains plug, extension leads and inter connections, between pieces of equipment, are properly made and in accordance with the manufacturers instructions. Switch off and withdraw the mains plug when making or changing connections.

**DO** leave at least 10 cm clearance around the top, sides and back of the TV to allow adequate ventilation and sound response.

**DO** be careful with glass panels or doors on equipment.

**DON'T** continue to operate the equipment if you are in any doubt about it working normally, or it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

**DON'T** remove any fixed cover as this may expose dangerous voltages.

**DON'T** leave equipment switched on when it is unattended, unless it is specifically stated that it is designed for unattended operation or has a standby mode. Switch off using the switch on the equipment and make sure your family know how to do this. Special arrangements may need to be made for infirm or handicapped people.

**DON'T** use equipment such as personal stereos or radios so that you are distracted from the requirements of traffic safety. It is illegal to watch television whilst driving.

**DON'T** listen to headphones at high volume, as such use can permanently damage your hearing.

**DON'T** obstruct the ventilation of the equipment for example, with curtains or soft furnishings. Overheating will cause damage and shorten the life of the equipment.

**DON'T** use makeshift stands and NEVER fix legs with wood screws - to ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided, according to the instructions.

**DON'T** allow electrical equipment to be exposed to rain or moisture. ABOVE ALL - NEVER let anyone, especially children, push anything into holes, slots or any other openings in the case - this could result in a fatal electric shock - NEVER guess or take chances with electrical equipment of any kind - it is better to be safe than sorry.

**Cleaning the screen and cabinet.** After turning off the power, clean the screen and cabinet with a soft, dry cloth. We recommend that you do not use any proprietary polishes or solvents on the screen or cabinet as this may cause damage.

When the set reaches the end of its useful life please dispose of it in accordance with Local Government Regulations at a recycling centre.

# Specifications & Accessories

## Specifications:

Receiving system	CCIR (PAL - I) TV Broadcast standard
Receiving channels	UHF: Channels 21-69
Mains Plug 'Fitted' fuse	5 amp
Power consumption	85 watts
Programme Positions	60
Stereo	Nicam - I
Video Input	PAL, PAL 60 Hz. (Video disk playback) NTSC 3.58/4.43 MHz./50Hz. NTSC (VTR playback)
Input/Output	Scart -1 (Full -21 pin) RGB, AV
Input/Output	Scart-2 (21 pin) AV, S-video
Front input	Input 2 (AV and L + R audio RCA jacks)
Visible Screen Size	510 mm
Sound output	10 W+ 10W. rms (at 10% distortion)
Dimensions (approx)	632 mm (W)    484 mm (H)    485 mm (D)
Weight (approx)	21.4Kg
Headphone Socket	3.5 mm Stereo

## Accessories:

- 1 Remote control
- 2 (R6 or AA) batteries

© Toshiba Consumer Products (UK) Ltd

All rights reserved.

Reproduction in whole or part without written permission is strictly prohibited.

**Toshiba (UK) Ltd**

Toshiba House, Frimley Road, Frimley, Camberley, Surrey, UK GU16 5JJ

Telephone No: 01276-62222

Specification is subject to change without notice.